



Crosman 22xx to PCP Conversion KIT

First disassemble your Crosman 22xx airgun. Remove all internals from Main Tube. You need to cut from Main Tube exactly 88mm. (Very important to cut exactly 88mm) You will need only this 88mm tube.

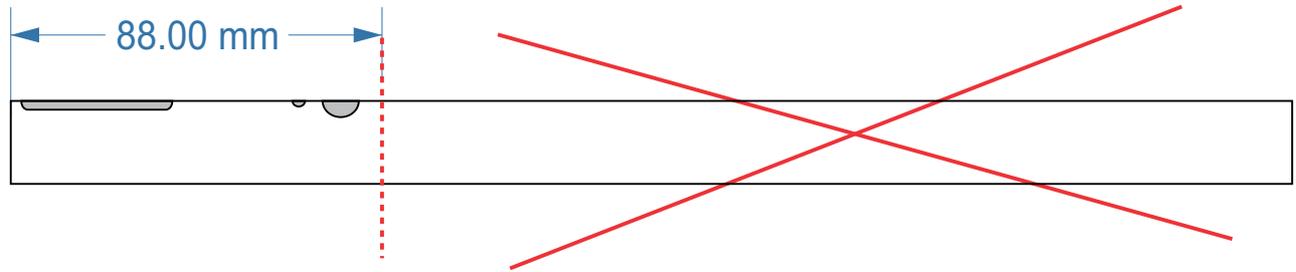


Put your Air Reservoir in to this 88mm tube and align air transfer port holes. After this put inside 88mm tube Crosman 22xx hammer and spring. Also speed adjuster plug which you have included in KIT.

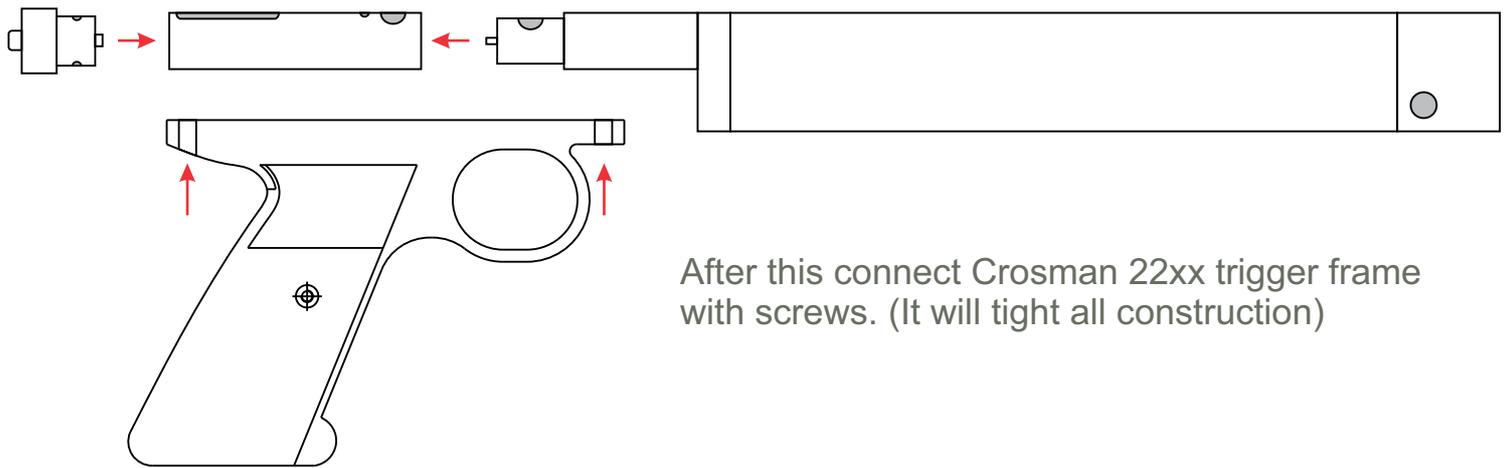


After this connect Crosman 22xx trigger frame with screws. (It will tight all construction)

Now assemble Crosman 22xx barrel with breech and Sound moderator. Put air transfer tube in to the air transfer port hole and you are ready to assemble device.

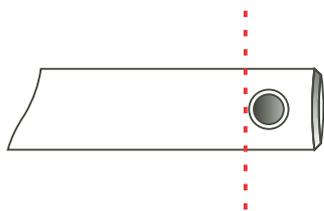

NOTE: to install Crosman 22xx barrel in to Side Lever Breech you must cut barrel exactly after transfer port because now port is already in to breech. Also you will need to turn barrel part which goes in to the breech to 10.96mm diameter

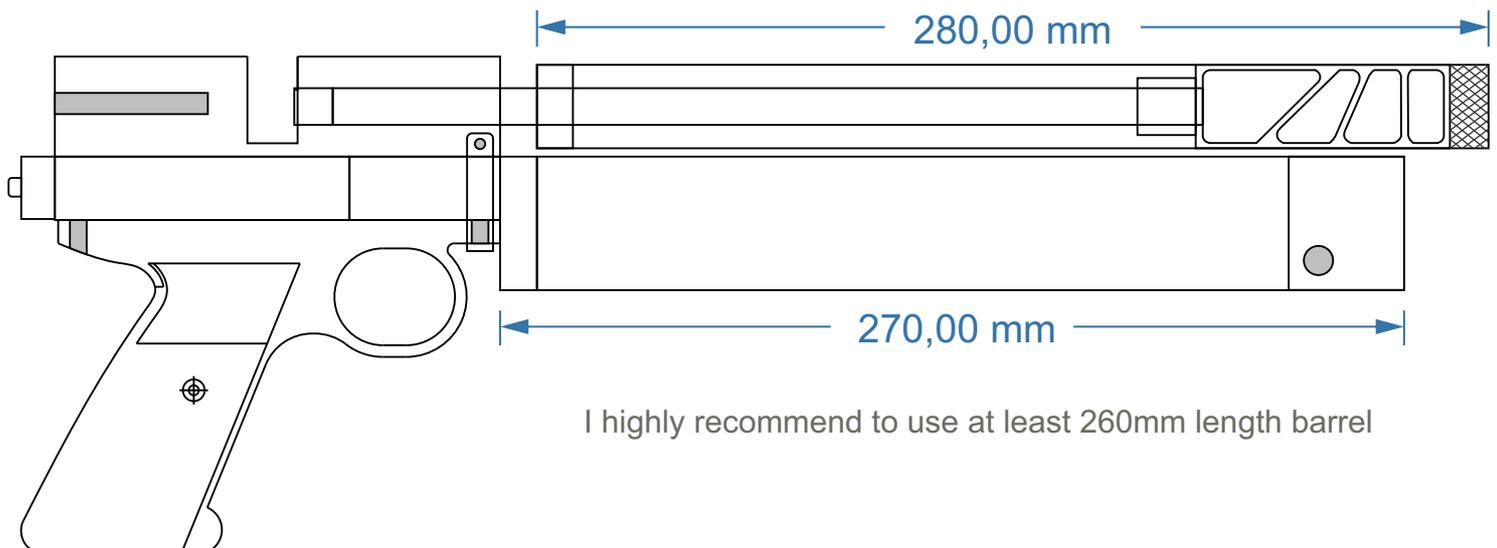

I highly recommend to use at least 260mm length barrel